Installation Instructions

Split or Open Storage Assembly

GENERAL INFORMATION

Bi-fold doors must be installed and the hinges properly adjusted before installing the Split or Open Storage Assembly.

SPLIT STORAGE INSTALLATION

NOTE
Install the Bi-Fold Doors (refer to Bi-Fold Door Installation Instructions).

- **A.** Open Bi-Fold Doors and install the screws (#10-24 x 5/8") into Hinge Panels for mounting Shelf Panels. The shelf panel for the Center Column has a cut-out for the electrical outlet.
- **B.** Position Shelf panels on mounting screws and then tighten screws.

NOTE
Front Storage Area can be placed on either Side A or Side B.

- **C.** Install one Back Panel (four #10-24 x 5/8" screws).
- **D.** Install Center Panel (four #10-24 x 5/8" screws).
- **E.** Install other Back Panel (eight #10-24 x 5/8" screws).
- **F.** Install two stiffner screws (#8 x 5/8" particle board) one on each back panel.
- **G.** Install shelf brackets and shelves.
- **H.** After completion of installation, clean unit using a mild solution of soap and water.

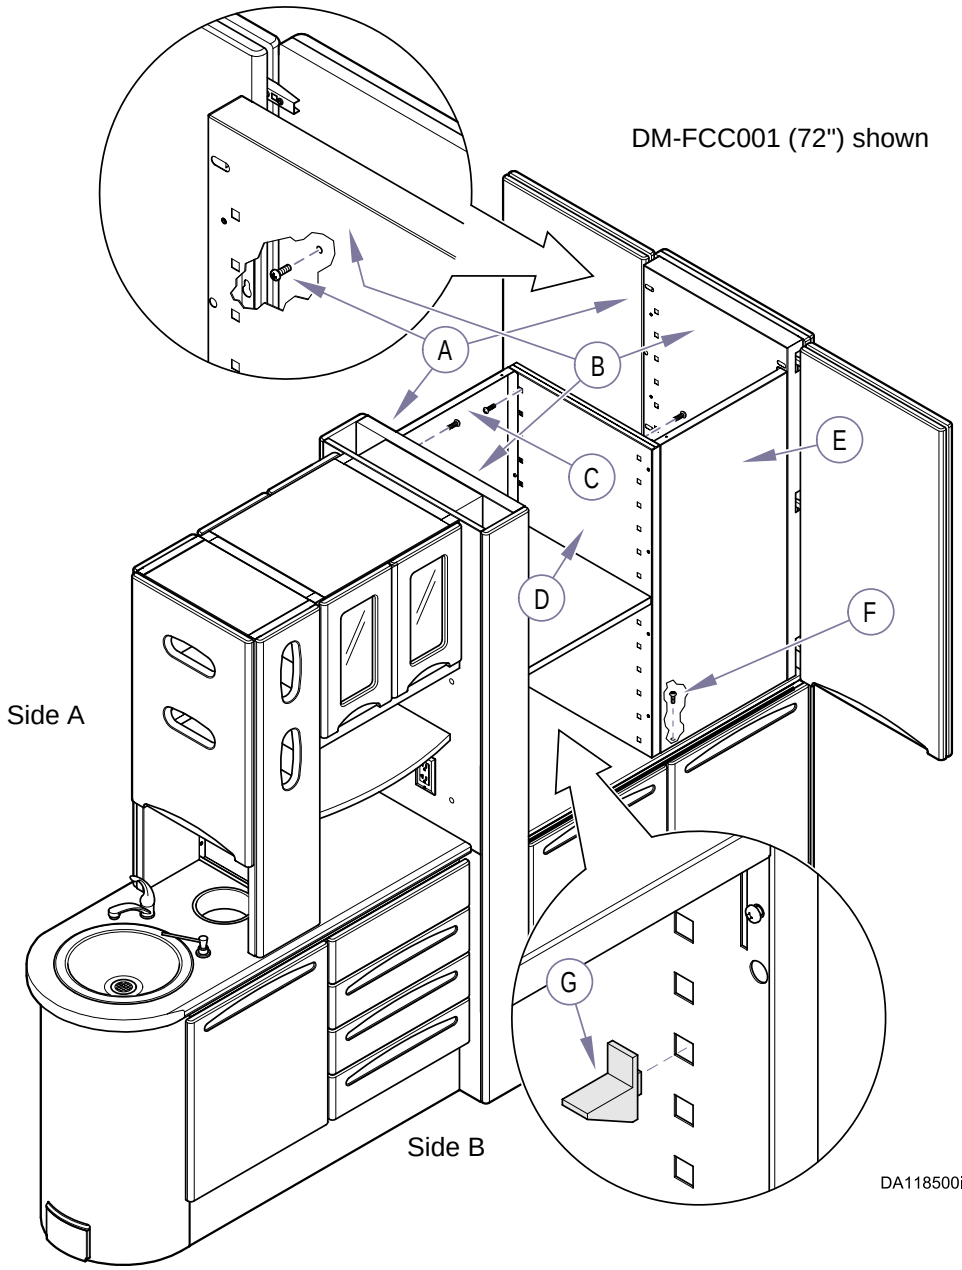

© Midmark Corporation - 2002

OPEN STORAGE INSTALLATION

NOTE

Install the Bi-Fold Doors (refer to Bi-Fold Door Installation Instructions).

A. Open Bi-Fold Doors and install the screws (#10-24 x 5/8") into Hinge Panels for mounting Shelf Panels.
The shelf panel for the Center Column has a cut-out for the electrical outlet.

B. Position Shelf panels on mounting screws and then tighten screws.

C. Install shelf brackets and shelves.

D. After completion of installation, clean unit using a mild solution of soap and water.

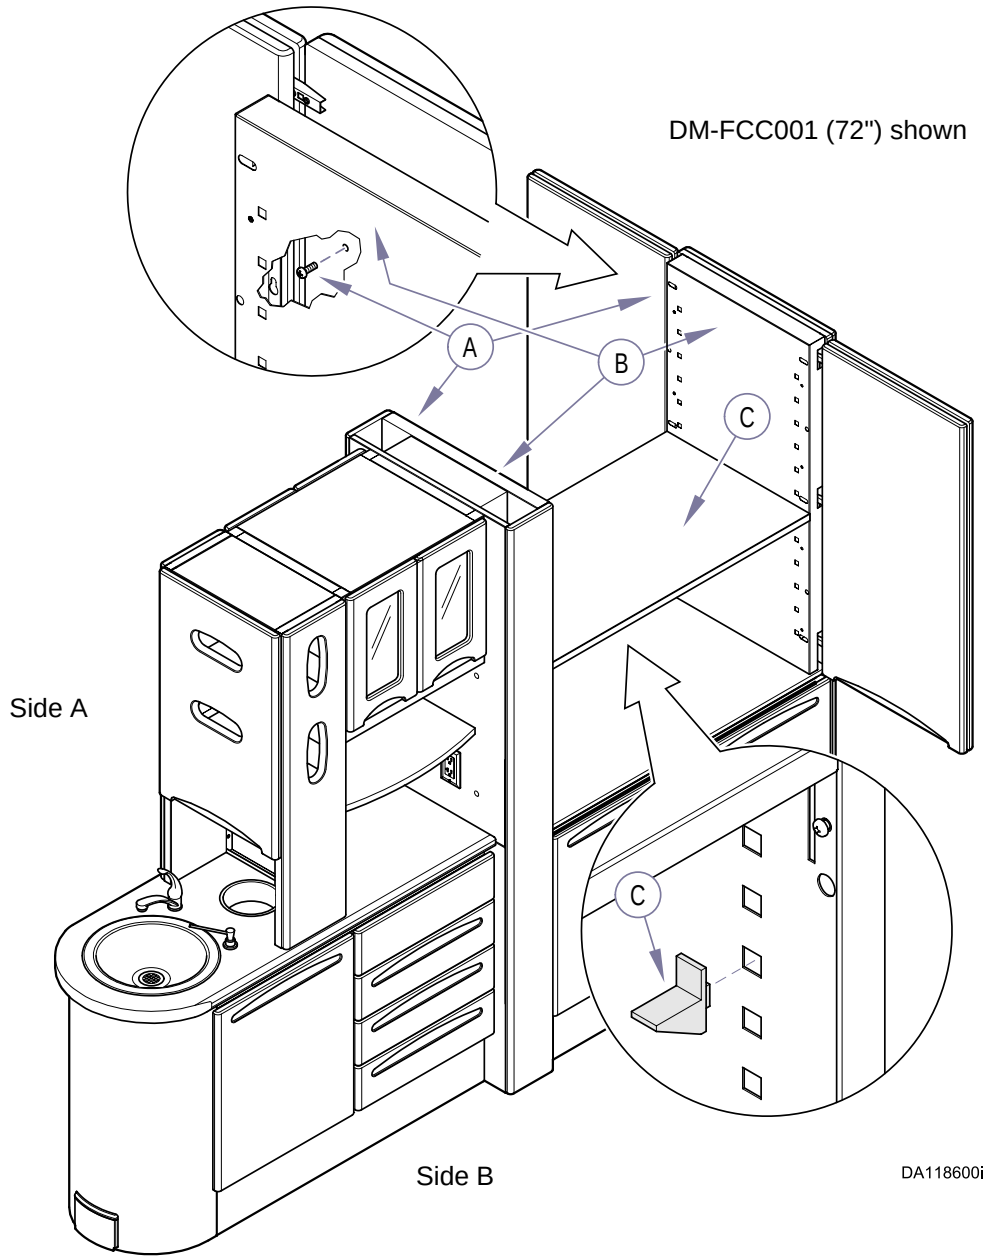

Midmark Corporation
60 Vista Drive
P.O. Box 286
Versailles, Ohio 45380-0286
937-526-3662
Fax 937-526-5542
midmark.com

003-1325-00 Rev. B (12/02)

© Midmark Corporation - 2002